

# Stereo Speaker Audio Audio

## IW250-2243W1

### Source 1 or 2 Speaker Selector Switch


1. Handling power : 100 watt/channel.
2. Rotary type switch.



### INSTRUCTIONS

1. The terminal block accepts 16 to 22 gauge wire.
2. Remove about 1/4" of insulation from the ends of all wires to be connected to the speaker switch and twist the exposed strands. Use the block-wiring diagram as you connect amplifiers and speakers.
3. When using two stereo amplifier sources, attach the wire to inputs "1" and "2". Attach the speaker wire to the stereo speakers to the "Output" located on the rear of the switch panel.

### 1. Without Volume Control

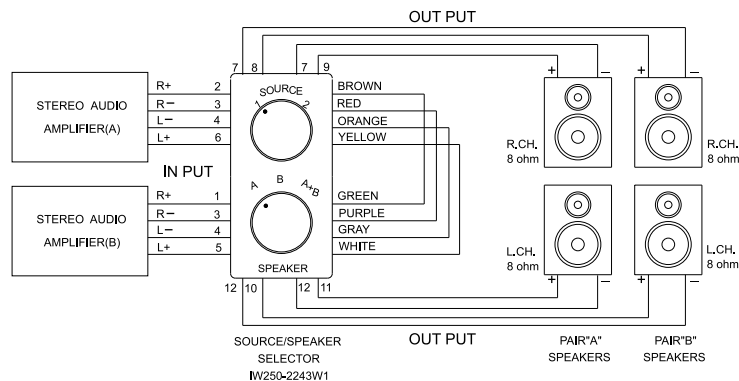

### 2. With Volume Control

